

# VENTSTOP Installation

## Step 1: Measure vent & cut Velcro fastener:


- > Measure vent length and width
- > **DO NOT** separate Hook tape from Loop tape

## Step 2: Apply Velcro fastener to vent frame:


- > **Clean vent frame before applying Velcro!**
- > Adhere the **HOOK TAPE** (hard side) to the flat surface of each vent's outer frame – green lines below pictured (**keep Hook & Loop tapes together**) *Tip: cut Velcro to meet tightly at corners with no overlap.*

## Step 3: Apply VentSTOP Vent Cover, *white side facing you:*


- > Remove film from adhesive (Loop Tape, now on vent)
- > **Press firmly all around** to ensure proper adhesion of fastener to vent and cover – THAT'S IT!

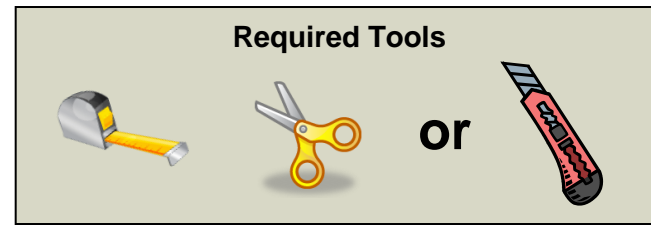

Completed Installation

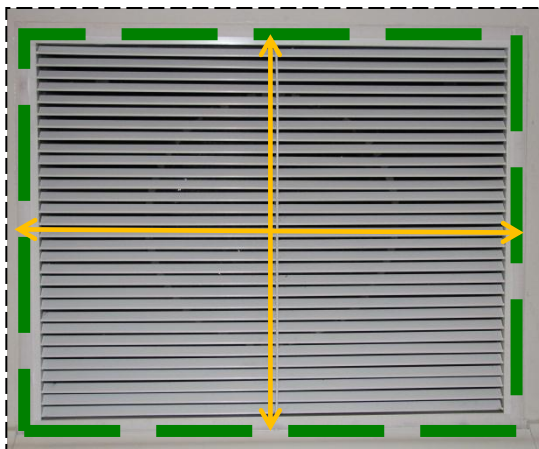

CAC Return or Fan  
Grille

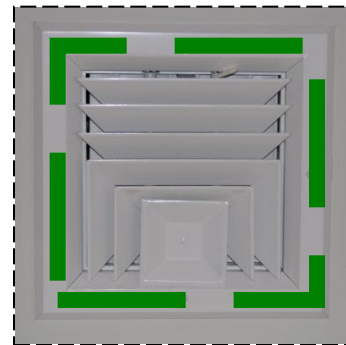

CAC Register

## If TRIMMING of VentSTOP Cover is required:

- > **Follow the three installation steps first**
- > Remove cover from vent (don't pull too hard)
- > Cut around Velcro on cover & reapply

## To use as an AIR DEFLECTOR/REDIRECTOR:

- > Don't attach one (or two) sides of VentSTOP

## VentSTOP Removal:

- > Pulling gently, start from a corner of the vent

## VentSTOP Storage when not in use

- > Retain shipping materials for storage
- > Roll larger covers